


2.4 Adapter with screw terminals

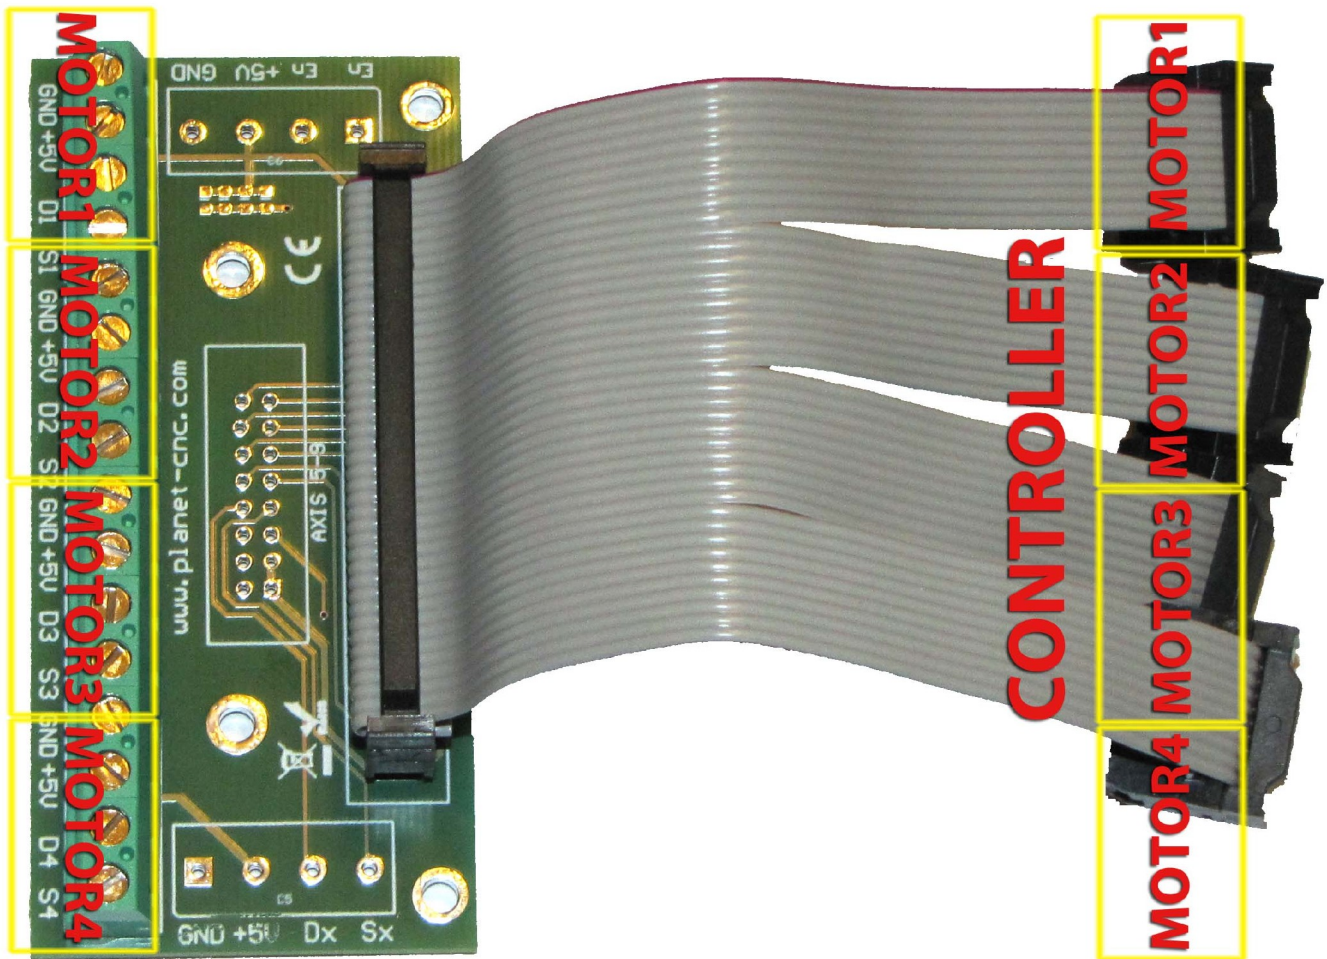

MOTOR 1-4 connectors on flat cable connect to controller.

MOTOR 1-4 screw terminals go to motor driver

- GND – ground
- +5V – 5V from controller if 5VEXT jumper on controller is closed
- S – direction signal from controller (for each motor)
- D – step signal from controller (for each motor)