

# RJ11 Connector for RS232 Communication

## Applied To:


### Stepper Driver:

DM432C, DM442, DM556, DM856, 3DM683, AM882, DM1182, DM2282, ES-D505, ES-D808, ES-D1008, CS-D808, CS-D1008

### Servo Driver:

DCS810, DCS810S, ACS306, ACS606, ACS806

RS232 Communication Port			
Pin	Name	I/O	Description
1	NC	-	Not connected
2	+5V	O	+5 V power output, <b>left it unconnected when connect to a PC serial port</b>
3	TxD	O	RS232 transmit
4	GND	GND	Ground
5	RxD	I	RS232 receive
6	NC	-	Not connected

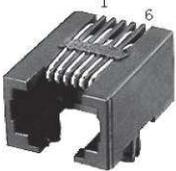

## Cable connections to a PC serial port (Male DB9)

