SOROTEC

Wiring Instructions Portal milling machines Hobby Line

Support for setup and operation also in the user forum:

www.hobbyline.info

SOROTEC GmbH Withig 12 77836 Rheinmünster Tel.: +49 (0) 7227-994255-0 Fax: +49 (0) 7227-994255-9 E-Mail: sorotec@sorotec.de Web: www.sorotec.de HL1.AS.STANDARD

Version 2.1.0



© 2019 Sorotec GmbH

Reproduction, duplication or translation, also in extracts, is not permitted without the written approval of Sorotec GmbH. All rights under the Copyright Act remain expressly reserved to Sorotec GmbH.

Technical changes reserved. Made in Germany.

Wiring Instructions Hobby Line

SOROTEC

Requirements

These instructions show the wiring of portal milling machines of the Sorotec Hobby-Line with the motor set (HL1.AS.STANDARD) available as an accessory. The completed mechanical construction of the kit machine and a basic understanding of electrical relationships are required.



The electrical system of the Hobby Line milling machines described here works in the low voltage range below 60 volts, which is safe for humans. Nevertheless, pay careful attention to possible sources of error (insulation, kink protection, ...) to ensure proper functioning. Short circuits in particular can damage parts of the system or cause fires.

Grounding

Ground all motors. To do this, attach the grounding cable to the flange of the respective motor with a ring cable lug each, as shown in Figure 1. Run all grounding cables to the central ground point of the controller (Fig. 2).

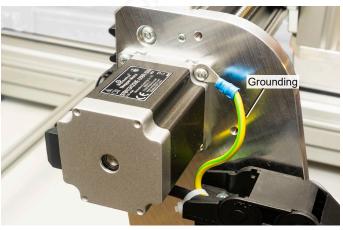


Fig. 1: Grounding on the motor flange



Fig. 2: Central ground point on the housing of the controller

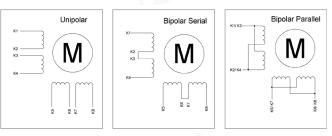


Fig. 3: Connection variants for stepper motors

Motor connection

There are basically three options for connecting stepper motors (see Figure 3). We recommend the **Bipo-Iar Parallel** variant for control with the MINI control kit.

SOROTEC

Reference switch and Emergency stop switch

Provide the control lines for the reference switches and the emergency stop button with cable lugs and connect the switches as shown in Fig. 4 and Fig. 5. Route the cables through the drag chains where appropriate.



The mains connection cables of milling spindles are not suitable for drag chains. There is a risk of chafed areas in the insulation. Short circuits and electric shocks can result. Never lay the power cord of your milling spindle in the drag chain!



Fig. 4: Connection of the reference switches



Fig. 5: Control line to the emergency stop switch

Bundling and fixing

Finally, fix the cables with blocks and cable ties. Combine parallel lines in bundles (see Fig. 2). Wind the cable harness leading to the control with winding hose.